

Link do produktu: <https://inforolnik.pl/czujnik-cisnienia-ford-new-holland-steyr-14437985-14438085-5115055-5157074-5160107-5160110-82031395-87395493-p-8251.html>



Czujnik ciśnienia Ford New Holland Steyr 14437985 14438085 5115055 5157074 5160107 5160110 82031395 87395493

Numer katalogowy

S.107589

Opis produktu

Numerы porównawcze: 14437985 14438085 5115055 5157074 5160107 5160110 82031395 87395493

Zastosowanie

Kliknij i zobacz inne części które również pasują do : [Case IH JX100U](#)[Case IH JX1060C](#)[Case IH JX1070C](#)[Case IH JX1070N](#)[Case IH JX1070U](#)[Case IH JX1075C](#)[Case IH JX1075N](#)[Case IH JX1080U](#)[Case IH JX1085C](#)[Case IH JX1090U](#)[Case IH JX1095C](#)[Case IH JX1095N](#)[Case IH JX1100U](#)[Case IH JX70U](#)[Case IH JX80U](#)[Case IH JX90U](#)[Case IH JXU 105](#)[Case IH JXU 115](#)[Case IH JXU 75](#)[Case IH JXU 85](#)[Case IH JXU 95](#)[Case IH MAXXUM 100 - LIMITED](#)[Case IH MAXXUM 100 - VALUE](#)[Case IH MAXXUM 100 - X-LINE](#)[Case IH MAXXUM 110 - CVT](#)[Case IH MAXXUM 110 - CVX](#)[Case IH MAXXUM 110 - GARU](#)[Case IH MAXXUM 110 - LIMITED](#)[Case IH MAXXUM 110 - PROC](#)[Case IH MAXXUM 110 - VALUE](#)[Case IH MAXXUM 110 - X-LINE](#)[Case IH MAXXUM 115 - CVT](#)[Case IH MAXXUM 115 - CVX](#)[Case IH MAXXUM 115 - GARU](#)[Case IH MAXXUM 115 - LIMITED](#)[Case IH MAXXUM 115 - PROC](#)[Case IH MAXXUM 115 - VALUE](#)[Case IH MAXXUM 115 - X-LINE](#)[Case IH Maxxum 115 \(Maxxum Series\)](#)[Case IH MAXXUM 120 - CVT](#)[Case IH MAXXUM 120 - CVX](#)[Case IH MAXXUM 120 - GARU](#)[Case IH MAXXUM 120 - PROC](#)[Case IH MAXXUM 125 - CVT](#)[Case IH MAXXUM 125 - CVX](#)[Case IH MAXXUM 125 - GARU](#)[Case IH MAXXUM 125 - LIMITED](#)[Case IH MAXXUM 125 - PROC](#)[Case IH MAXXUM 125 - VALUE](#)[Case IH MAXXUM 125 - X-LINE](#)[Case IH Maxxum 125 \(Maxxum Series\)](#)[Case IH MXU135 \(MXU Series\)](#)[Case IH OPTUM 270 CVX](#)[Case IH OPTUM 300 CVX](#)[Case IH Puma 115 \(Puma Series\)](#)[Case IH PUMA 125 - GARU](#)[Case IH Puma 125 \(Puma Series\)](#)[Case IH PUMA 130 - CVT](#)[Case IH PUMA 130 - CVX](#)[Case IH Puma 130 \(Puma Series\)](#)[Case IH PUMA 140 - GARU](#)[Case IH Puma 140 \(Puma Series\)](#)[Case IH PUMA 145 - CVT](#)[Case IH PUMA 145 - CVX](#)[Case IH Puma 145 \(Puma Series\)](#)[Case IH PUMA 150 - CVT](#)[Case IH PUMA 150 - CVX](#)[Case IH PUMA 155 - GARU](#)[Case IH Puma 155 \(Puma Series\)](#)[Case IH PUMA 160](#)[Case IH PUMA 160 - CVT](#)[Case IH PUMA 160 - CVX](#)[Case IH PUMA 165 - CVT](#)[Case IH PUMA 165 - CVX](#)[Case IH Puma 165 \(Puma Series\)](#)[Case IH PUMA 170 - CVT](#)[Case IH PUMA 170 - CVX](#)[Case IH Puma 170 \(Puma Series\)](#)[Case IH PUMA 175 - CVX](#)[Case IH PUMA 180 - CVT](#)[Case IH PUMA 180 - CVX](#)[Case IH Puma 180 \(Puma Series\)](#)[Case IH PUMA 185 - CVT](#)[Case IH PUMA 185 - CVX](#)[Case IH Puma 185 \(Puma Series\)](#)[Case IH PUMA 195 - CVT](#)[Case IH PUMA 195 - CVX](#)[Case IH Puma 195 \(Puma Series\)](#)[Case IH PUMA 200 - CVT](#)[Case IH PUMA 200 - CVX](#)[Case IH Puma 200 \(Puma Series\)](#)[Case IH PUMA 210 - CVT](#)[Case IH PUMA 210 - CVX](#)[Case IH Puma 210 \(Puma Series\)](#)[Case IH PUMA 215 - CVT](#)[Case IH PUMA 215 - CVX](#)[Case IH Puma 215 \(Puma Series\)](#)[Case IH PUMA 220](#)[Case IH PUMA 220 - CVT](#)[Case IH PUMA 220 - CVX](#)[Case IH PUMA 225 - CVT](#)[Case IH PUMA 225 - CVX](#)[Case IH Puma 230 - CVT](#)[Case IH PUMA 230 - CVX](#)[Case IH PUMA 240 - CVT](#)[Case IH PUMA 240 - CVX](#)[Case IH QUANTUM 65C](#)[Case IH QUANTUM 75C](#)[Case IH QUANTUM 85C](#)[Case IH QUANTUM 95C](#)[Fiat 115-90 \(90 Series\)](#)[Fiat 130-90 \(90 Series\)](#)[Fiat 140-90 \(90 Series\)](#)[Fiat 160-90 \(90 Series\)](#)[Fiat 180-90 \(90 Series\)](#)[Fiat F100 \(F Series\)](#)[Fiat F110 \(F Series\)](#)[Fiat F120 \(F Series\)](#)[Fiat F130 \(F Series\)](#)[Fiat F140 \(F Series\)](#)[Fiat M100 \(M Series\)](#)[Fiat M115 \(M Series\)](#)[Fiat M135 \(M Series\)](#)[Fiat M160 \(M Series\)](#)[Ford New Holland 8160 \(60 Series\)](#)[Ford New Holland 8260 \(60 Series\)](#)[Ford New Holland 8360 \(60 Series\)](#)[Ford New Holland 8430 \(30 Series\)](#)[Ford New Holland 8560 \(60 Series\)](#)[Ford New Holland 8830 \(30 Series\)](#)[Ford New Holland T4020](#)[Ford New Holland T4030](#)[Ford New Holland T4030FF](#)[Ford New Holland T4030F - UPGRADE SPECIAL](#)[Ford New Holland T4040](#)[Ford New Holland T4040FF](#)[Ford New Holland T4040F - UPGRADE SPECIAL](#)[Ford New Holland T4050](#)[Ford New Holland T4050FF](#)[Ford New Holland T4050F - UPGRADE SPECIAL](#)[Ford New Holland T4060F - UPGRADE SPECIAL](#)[Ford New Holland T5030 \(T5000 Series\)](#)[Ford](#)

Account for EURO PAYMENTS:

PL78 1140 2004 0000 3812 0242 0461

Bic (IBAN) : BREXPLPWMBK

[New Holland T5040 \(T5000 Series\)](#)[Ford New Holland T5050 \(T5000 Series\)](#)[Ford New Holland T5060 \(T5000 Series\)](#)[Ford New Holland T5070 \(T5000 Series\)](#)[Ford New Holland T6.120 \(T6 Series\)](#)[Ford New Holland T6.125](#)[Ford New Holland T6.140 - AUTOCOMMAND](#)[Ford New Holland T6.140 \(T6 Series\)](#)[Ford New Holland T6.145](#)[Ford New Holland T6.145 - AUTOCOMMAND](#)[Ford New Holland T6.145 - DUAL CLUTCH](#)[Ford New Holland T6.150 - AUTOCOMMAND](#)[Ford New Holland T6.150 \(T6 Series\)](#)[Ford New Holland T6.155 - AUTOCOMMAND](#)[Ford New Holland T6.155 - DUAL CLUTCH](#)[Ford New Holland T6.155 \(T6 Series\)](#)[Ford New Holland T6.160 - AUTOCOMMAND](#)[Ford New Holland T6.160 \(T6 Series\)](#)[Ford New Holland T6.165 - AUTOCOMMAND](#)[Ford New Holland T6.165 - DUAL CLUTCH](#)[Ford New Holland T6.165 \(T6 Series\)](#)[Ford New Holland T6.175 - AUTOCOMMAND](#)[Ford New Holland T6.175 - DUAL CLUTCH](#)[Ford New Holland T6.175 \(T6 Series\)](#)[Ford New Holland T6.180](#)[Ford New Holland T6.180 - AUTOCOMMAND](#)[Ford New Holland T6.180 - DUAL CLUTCH](#)[Ford New Holland T6010 - DELTA](#)[Ford New Holland T6010 - PLUS](#)[Ford New Holland T6020 - DELTA](#)[Ford New Holland T6020 - ELITE](#)[Ford New Holland T6020 - PLUS](#)[Ford New Holland T6030 - DELTA](#)[Ford New Holland T6030 - ELITE](#)[Ford New Holland T6030 - PLUS](#)[Ford New Holland T6030 - POWER COMMAND](#)[Ford New Holland T6030 - RANGE COMMAND](#)[Ford New Holland T6040 - ELITE](#)[Ford New Holland T6050 - DELTA](#)[Ford New Holland T6050 - ELITE](#)[Ford New Holland T6050 - PLUS](#)[Ford New Holland T6050 - POWER COMMAND](#)[Ford New Holland T6050 - RANGE COMMAND](#)[Ford New Holland T6060 - ELITE](#)[Ford New Holland T6070 - ELITE](#)[Ford New Holland T6070 - PLUS](#)[Ford New Holland T6070 - POWER COMMAND](#)[Ford New Holland T6070 - RANGE COMMAND](#)[Ford New Holland T6080 - POWER COMMAND](#)[Ford New Holland T6080 - RANGE COMMAND](#)[Ford New Holland T6090 - POWER COMMAND](#)[Ford New Holland T6090 - RANGE COMMAND](#)[Ford New Holland T7.140 - MECH BRAZILIAN](#)[Ford New Holland T7.150 - MECH BRAZILIAN](#)[Ford New Holland T7.165 - CLASSIC](#)[Ford New Holland T7.165 - MECH BRAZILIAN](#)[Ford New Holland T7.170 - AUTOCOMMAND](#)[Ford New Holland T7.170 - POWER COMMAND](#)[Ford New Holland T7.170 - RANGE COMMAND](#)[Ford New Holland T7.175 - AUTOCOMMAND](#)[Ford New Holland T7.175 - CLASSIC](#)[Ford New Holland T7.175 - SIDEWINDER I](#)[Ford New Holland T7.175 - SPS BRAZILIAN](#)[Ford New Holland T7.180 - MECH BRAZILIAN](#)[Ford New Holland T7.185 - AUTOCOMMAND](#)[Ford New Holland T7.185 - POWER COMMAND](#)[Ford New Holland T7.185 - RANGE COMMAND](#)[Ford New Holland T7.190 - AUTOCOMMAND](#)[Ford New Holland T7.190 - CLASSIC](#)[Ford New Holland T7.190 - SIDEWINDER I](#)[Ford New Holland T7.190 - SPS BRAZILIAN](#)[Ford New Holland T7.195 - SPS BRAZILIAN](#)[Ford New Holland T7.200 - AUTOCOMMAND](#)[Ford New Holland T7.200 - POWER COMMAND](#)[Ford New Holland T7.200 - RANGE COMMAND](#)[Ford New Holland T7.205 - SPS BRAZILIAN](#)[Ford New Holland T7.210 - AUTOCOMMAND](#)[Ford New Holland T7.210 - CLASSIC](#)[Ford New Holland T7.210 - POWER COMMAND](#)[Ford New Holland T7.210 - RANGE COMMAND](#)[Ford New Holland T7.210 - SIDEWINDER I](#)[Ford New Holland T7.220 - AUTOCOMMAND](#)[Ford New Holland T7.220 \(T7 Series\)](#)[Ford New Holland T7.225 - AUTOCOMMAND](#)[Ford New Holland T7.230](#)[Ford New Holland T7.230 - AUTOCOMMAND](#)[Ford New Holland T7.235 - AUTOCOMMAND](#)[Ford New Holland T7.235 \(T7 Series\)](#)[Ford New Holland T7.245](#)[Ford New Holland T7.245 - AUTOCOMMAND](#)[Ford New Holland T7.250 - AUTOCOMMAND](#)[Ford New Holland T7.250 \(T7 Series\)](#)[Ford New Holland T7.260 - AUTOCOMMAND](#)[Ford New Holland T7.260 \(T7 Series\)](#)[Ford New Holland T7.270 - AUTOCOMMAND](#)[Ford New Holland T7.275 - AUTOCOMMAND](#)[Ford New Holland T7.290 - AUTOCOMMAND](#)[Ford New Holland T7.315 - AUTOCOMMAND](#)[Ford New Holland T7030 - AUTOCOMMAND](#)[Ford New Holland T7030 - POWER COMMAND](#)[Ford New Holland T7030 \(T7000 Series\)](#)[Ford New Holland T7040 - AUTOCOMMAND](#)[Ford New Holland T7040 - POWER COMMAND](#)[Ford New Holland T7040 \(T7000 Series\)](#)[Ford New Holland T7050 - AUTOCOMMAND](#)[Ford New Holland T7050 - POWER COMMAND](#)[Ford New Holland T7050 \(T7000 Series\)](#)[Ford New Holland T7060 - AUTOCOMMAND](#)[Ford New Holland T7060 - POWER COMMAND](#)[Ford New Holland T7060 \(T7000 Series\)](#)[Ford New Holland T7070 - AUTOCOMMAND](#)[Ford New Holland TL100 \(TL Series\)](#)[Ford New Holland TL100A](#)[Ford New Holland TL70 \(TL Series\)](#)[Ford New Holland TL70A](#)[Ford New Holland TL80 \(TL Series\)](#)[Ford New Holland TL80A](#)[Ford New Holland TL90 \(TL Series\)](#)[Ford New Holland TL90A](#)[Ford New Holland TM110 \(TM Series\)](#)[Ford New Holland TM115 \(TM Series\)](#)[Ford New Holland TM120 \(TM Series\)](#)[Ford New Holland TM125 \(TM Series\)](#)[Ford New Holland TM130 \(TM Series\)](#)[Ford New Holland TM135 \(TM Series\)](#)[Ford New Holland TM140 \(TM Series\)](#)[Ford New Holland TM150 \(TM Series\)](#)[Ford New Holland TM155 \(TM Series\)](#)[Ford New Holland TM165 \(TM Series\)](#)[Ford New Holland TM175 \(TM Series\)](#)[Ford New Holland TM180 \(TM Series\)](#)[Ford New Holland TM190 \(TM Series\)](#)[Ford New Holland TM7010 BRAZILIAN](#)[Ford New Holland TM7020 BRAZILIAN](#)[Ford New Holland TM7030 BRAZILIAN](#)[Ford New Holland TM7040 BRAZILIAN](#)[Ford New Holland TN55 \(TN Series\)](#)[Ford New Holland TN60A](#)[Ford New Holland TN60DA](#)[Ford New Holland TN60SA](#)[Ford New Holland TN60VA](#)[Ford New Holland TN65 \(TN Series\)](#)[Ford New Holland TN70 \(TN Series\)](#)[Ford New Holland TN70A](#)[Ford New Holland TN70DA](#)[Ford New Holland TN70NA](#)[Ford New Holland TN70SA](#)[Ford New Holland TN70VA](#)[Ford New Holland TN75 \(TN Series\)](#)[Ford New Holland TN75A](#)[Ford New Holland TN75DA](#)[Ford New Holland TN75FA](#)[Ford New Holland TN75NA](#)[Ford New Holland TN75SA](#)[Ford New Holland TN75VA](#)[Ford New Holland TN80FF](#)[Ford New Holland TN85A](#)[Ford New Holland TN85DA](#)[Ford New Holland TN85FA](#)[Ford New Holland TN85SA](#)[Ford New Holland TN90FF](#)[Ford New Holland TN95A](#)[Ford New Holland TN95DA](#)[Ford New Holland TN95FF](#)[Ford New Holland TN95FA](#)[Ford New Holland TN95NA](#)[Ford New Holland TN95VA](#)[Ford New Holland TS100A](#)[Ford New Holland TS110A](#)[Ford New Holland TS115A](#)[Ford New Holland TS125A](#)[Ford New Holland TS135A](#)[Steyr 360 KOMPAKT](#)[Steyr 370 KOMPAKT](#)[Steyr 375 KOMPAKT](#)[Steyr 4065 KOMPAKT](#)[Steyr 4075 KOMPAKT](#)[Steyr 4085 KOMPAKT](#)[Steyr 4095 KOMPAKT](#)[Steyr 4100 Profi \(Profi Series\)](#)[Steyr 4115 Profi \(Profi Series\)](#)[Steyr 485 KOMPAKT](#)[Steyr 495 KOMPAKT](#)[Steyr 6115 Profi \(Profi Series\)](#)[Steyr 6125 Profi \(Profi Series\)](#)[Steyr 6130CVT](#)[Steyr 6135 Profi \(Profi Series\)](#)[Steyr 6145CVT](#)[Steyr 6150CVT](#)[Steyr 6160CVT](#)[Steyr 6165CVT](#)[Steyr 6170CVT](#)[Steyr 6175CVT](#)[Steyr 6185CVT](#)[Steyr 6200CVT](#)[Steyr 6205CVT](#)[Steyr 6215CVT](#)[Steyr 6220CVT](#)[Steyr 6230CVT](#)[Steyr 6240 CVT](#)[Steyr 6250 TERRUS CVT](#)